


TITLE **UNIVERSAL CLOSER** FC-1000 SERIES

SHEET No. 3:02


SUB TITLE

SURFACE MOUNTED CLOSER DROP PLATES FC1000-12-AL AND FC-1000-14-AL

6 x clearance holes to suit M6 screws. Typ.

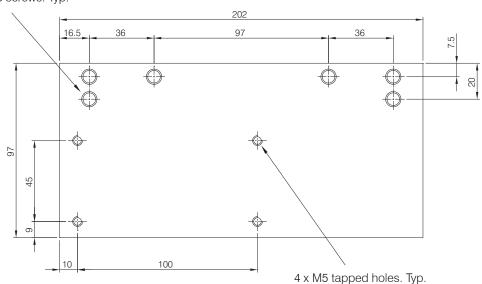

FC-1000-12-AL Backplate for use with FC1000 series surface closers on parallel arm installation

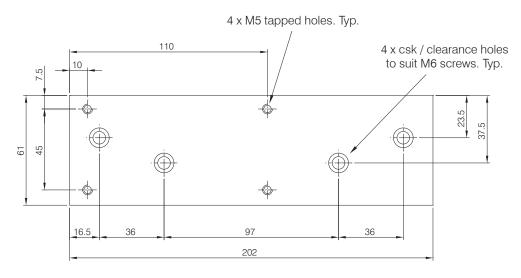

FC-1000-14-AL Backplate for use with FC1000 series surface closers on standard and top jamb installation



The Parkside Group Ltd

The Willow Centre 17 Willow Lane, Mitcham, Surrey, CR4 4NX Tel: 020-8685 9685 Fax: 020-8646 5096 Email: axim@parksidegroup.co.uk Web Site: www.axim.co.uk

SCALE	NTS @A4
DATE	MARCH 2014




SHEET No.

3:03


SUBTITLE SURFACE MOUNTED CLOSER MOUNTING BRACKET
FOR PARALLEL ARM INSTALLATION (FACE FIXED) FC-1000-15-AL


ISO view not to scale

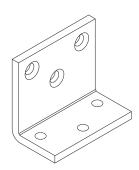


Material: Mild steel

Finish: Zinc plating + silver, bronze or white PPC

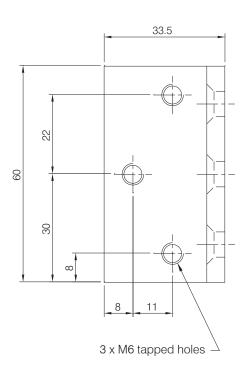

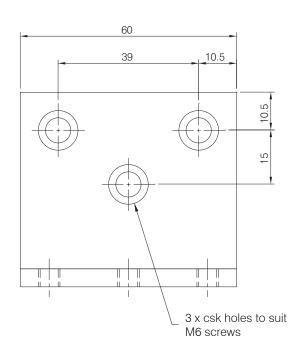

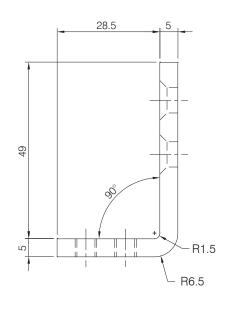



The Parkside Group Ltd

The Willow Centre
17 Willow Lane, Mitcham, Surrey, CR4 4NX
Tel: 020-8685 9685 Fax: 020-8646 5096
Email: axim@parksidegroup.co.uk
Web Site: www.axim.co.uk


SCALE	NTS @A4
DATE	MARCH 2014




SHEET No. **3:04**


SUBTITLE SURFACE MOUNTED CLOSER PACKING BLOCK


FOR PARALLEL ARM INSTALLATION (VERT. FIXED) FC-1000-16-AL

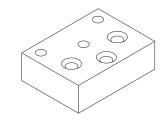

ISO view not to scale

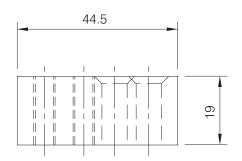

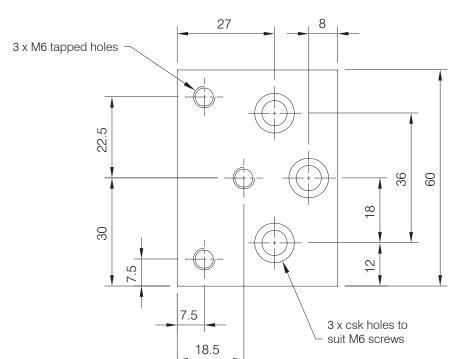

 



The Parkside Group Ltd

The Willow Centre
17 Willow Lane, Mitcham, Surrey, CR4 4NX
Tel: 020-8685 9685 Fax: 020-8646 5096
Email: axim@parksidegroup.co.uk
Web Site: www.axim.co.uk

SCALE	NTS @A4
DATE	MARCH 2014




UNIVERSAL CLOSER FC-1000 SERIES

SUB TITLE INSTALLATION INSTRUCTIONS

Standard installation

Closer mounted on door on pull side

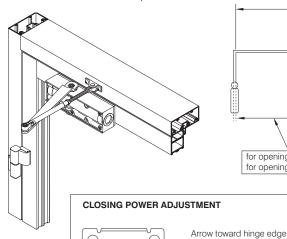


Right hand door shown


Arrow mark


Same dimensions apply for left hand door measured from hinge edge

for regular powerArrow away from hinge edgefor maximum power

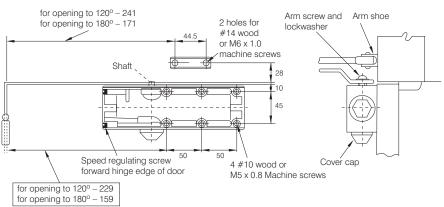


POSITION OF ARMS AND INDEX SETTINGS

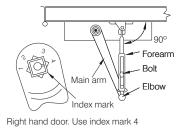


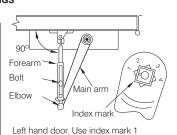


Top jamb installation

Closer mounted on top jamb on push side of door. Reveals of 70 to 127 requires long top jamb forearms

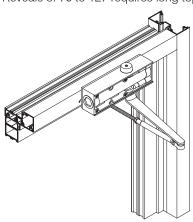

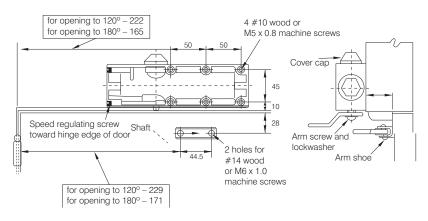

CLOSING POWER ADJUSTMENT

 


Arrow toward hinge edge
– for regular power

Arrow away from hinge edge
– for maximum power

Left hand door shown

Same dimensions apply for right hand door measured from hinge edge

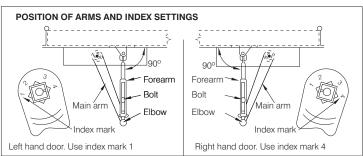



The Parkside Group Ltd

The Willow Centre
17 Willow Lane, Mitcham, Surrey, CR4 4NX
Tel: 020-8685 9685 Fax: 020-8646 5096
Email: axim@parksidegroup.co.uk
Web Site: www.axim.co.uk


SCALE	NTS @A4
DATE	MARCH 2014



SUB TITLE INSTALLATION INSTRUCTIONS


Parallel arm installation


Closer mounted on door on push side

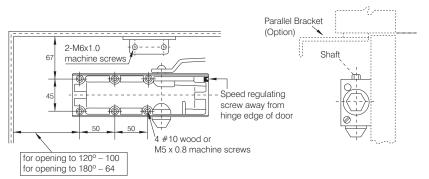



Left hand door shown

Same dimensions apply for right hand door measured from hinge edge.

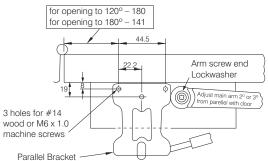

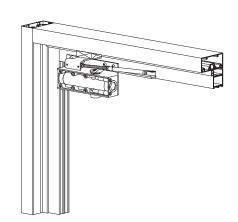

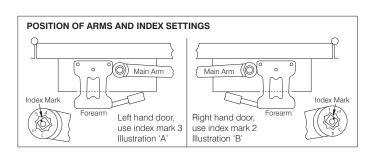

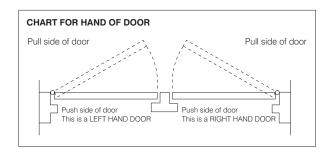

Latching speed Regulating Screw Slow

Instructions

Step 1

- A. Check hand of door.
- B. Select type of installation.

Step 2

- A. See instructions for installation you have selected.
- B. Follow instructions for correct application and adjustment.

Step 3

- A. Apply closer body and forearm (or parallel bracket and forearm) to door and frame as shown.
- B. Place main arm on shaft at proper index mark as shown and tighten arm screw with lockwasher securely.
- C. Adjust length of forearm as shown and attach to main arm at elbow and tighten locknut bolt.

Step 4

Fixing cover cap on shaft at unused side and insert rubber plug into one of unused fixing hole on body then slide in the Faceplate.

Step 5

Door closing and latching speeds are controlled by #1, #2 speed. regulating screw separately.

- A. Clockwise turns slow the Speed.
- B. Counterclockwise turns increase the speed.



Closing speed

Regulating Screw

The Parkside Group Ltd

Latching Speed

Closing Speed

The Willow Centre
17 Willow Lane, Mitcham, Surrey, CR4 4NX
Tel: 020-8685 9685 Fax: 020-8646 5096
Email: axim@parksidegroup.co.uk
Web Site: www.axim.co.uk

SCALE	NTS @A4
DATE	MARCH 2014