



TITLE RIM-MOUNTED CRASH BAR PR-7095 SERIES EXIT DEVICE

SUB TITLE INSTALLATION INSTRUCTIONS PR-7095



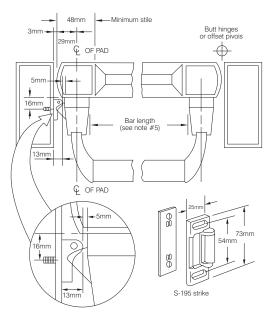

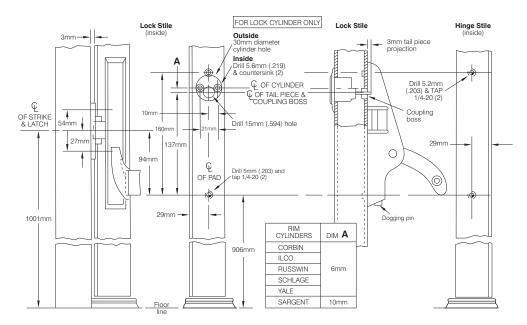

Preparation

- 1. Determine hand of door and prepare inside of lock and hinge stiles as show.
- 2. If cylinder Key Lock is to be used, prepare inside and outside of lock stile as shown.
 - A Cut Spindle of Rim Cylinder to project thru the door 3mm Install Rim Cylinder and secure with (2) 12-24x29mm Machine Screws NOTE: Screw heads must be flush.
 - B Determine Function of Key Cylinder:
 - STANDARD: Key removable in either locked or unlocked position. With Latch fully released, rotate Coupling Boss so index mark is up.
 - (2) NIGHT LATCH: Key removable in locked position only. With latch fully released, rotate Coupling Boss 90^o towards hinge side.
- Install (2) 1/4-20 Shoulder Studs on lock stile and position Exit Latch Pad over Studs and insert Cylinder Spindle into Coupling Boss. Place Pad over Studs and tighten 3 Socket Head Set Screws to secure in place.
- Install (2) 1/4-20 Shoulder Studs on hinge stile and place other Exit Pad over Studs and tighten 3 Socket Head Set Screws to secure in place.
- 5. Measure distance from inside edge to inside edge of Exit Pads for proper Cross Bar length. Cut Cross Bar. CAUTION: Cross Bar length must be within \pm 1mm for unit to function properly.
- Loosen 3 Set Screws on hinge stile Exit Pad and install Cross Bar using (2) 1/4-20 x25mm Oval Head Self-threading Screws. Tighten 3 Set Screws to secure in place.
- 7. Prepare lock jamb for Strike as shown and install using (2) #10 x 13mm Flat Head Self-threading Screws or #10 x 32mm All-purpose Screws.

The Parkside Group Ltd

The Willow Centre 17 Willow Lane, Mitcham, Surrey, CR4 4NX Tel: 020-8685 9685 Fax: 020-8646 5096 Email: axim@parksidegroup.co.uk Web Site: www.axim.co.uk

DOGGING EXIT DEVICE USING DOGGING PIN:

Fully depress Cross Bar and hold, push up Dogging Pin with screwdriver and rotate 90° in either direction.

TO RELEASE EXIT DEVICE:

Hold Cross Bar down and rotate Dogging Pin with screwdriver in either direction until Dogging Pin releases.

DOGGING EXIT DEVICE USING <u>CYLINDER KEY:</u> Turn Key toward hinge side approximately 360°.

TO RELEASE EXIT DEVICE:

Turn Key toward latch side approximately 360°.


SCALE	NTS @A4
DATE	MARCH 2014

For scaled technical or CAD drawings, please contact AXIM.



TITLE RIM-MOUNTED CRASH BAR PR-7095 SERIES EXIT DEVICE

SUB TITLE RIM MOUNTED CRASH BAR PANIC EXIT DEVICE PR-7095

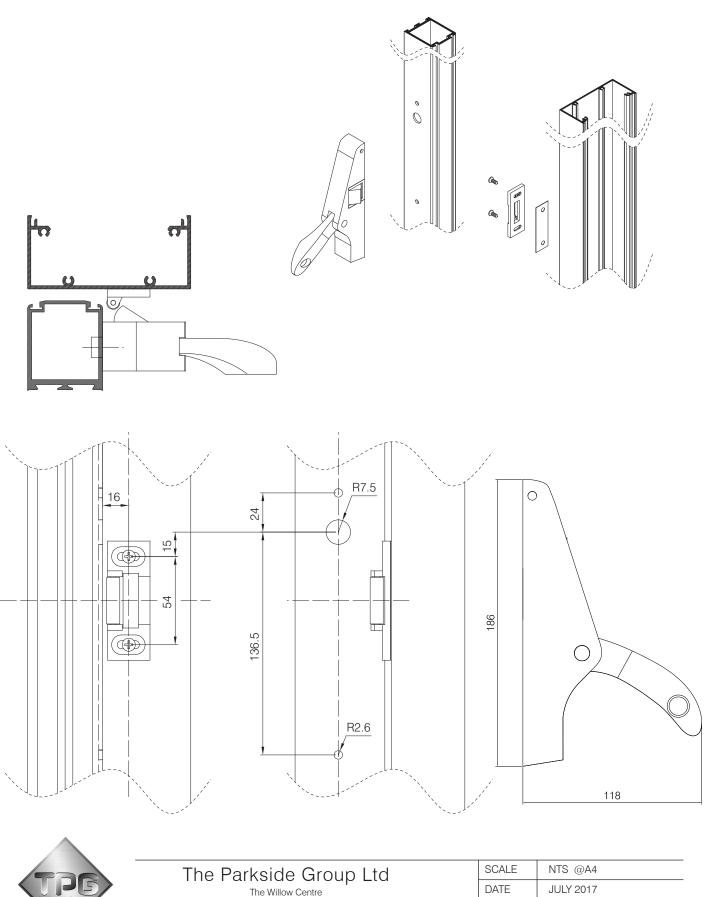

The Willow Centre 17 Willow Lane, Mitcham, Surrey, CR4 4NX Tel: 020-8685 9685 Fax: 020-8646 5096 Email: axim@parksidegroup.co.uk Web Site: www.axim.co.uk

For scaled technical or CAD drawings, please contact AXIM.




TITLE RIM-MOUNTED CRASH BAR PR-7095 SERIES EXIT DEVICE

SHEET No. 4:18

SUB TITLE RIM CYLINDERS FOR AXIM PANIC EXIT DEVICES

RC-795-AL Rim cylinder & mounting pad for use with 7095 panic exit devices

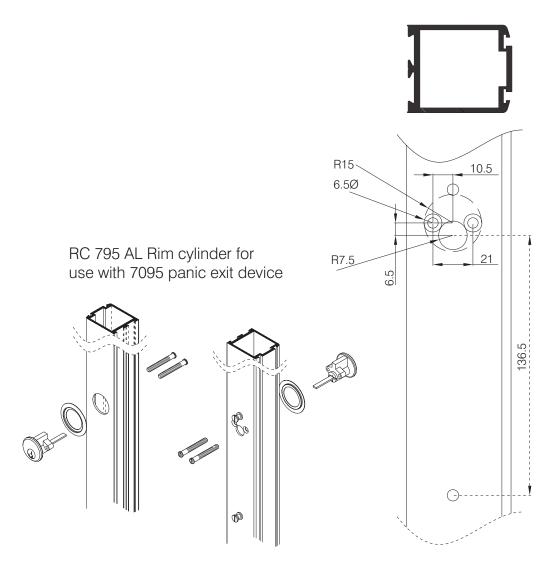



The Parkside Group Ltd

The Willow Centre 17 Willow Lane, Mitcham, Surrey, CR4 4NX Tel: 020-8685 9685 Fax: 020-8646 5096 Email: axim@parksidegroup.co.uk Web Site: www.axim.co.uk

SCALE	NTS @A4
DATE	JULY 2017

For scaled technical or CAD drawings, please contact AXIM.

