



TITLE RIM-MOUNTED PADDLE HANDLE PR-7095P SERIES EXIT DEVICE

SUB TITLE INSTALLATION INSTRUCTIONS PR-7095P

L.H.R.B. Door shown

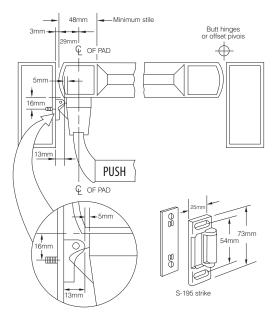

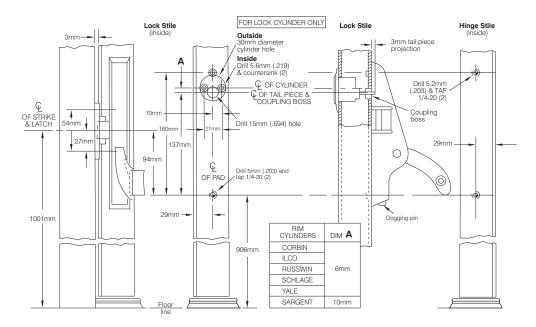

Preparation

- 1. Determine hand of door and prepare inside of lock and hinge stiles as shown.
- If cylinder Key Lock is to be used, prepare inside and outside of lock stile as shown.
 - A Cut Spindle of Rim Cylinder to project thru the door 3mm Install Rim Cylinder and secure with (2) 12-24x29mm Machine Screws NOTE: Screw heads must be flush.
 - B Determine Function of Key Cylinder:
 - STANDARD: Key removable in either locked or unlocked position. With Latch fully released, rotate Coupling Boss so index mark is up.
 - (2) NIGHT LATCH: Key removable in locked position only. With latch fully released, rotate Coupling Boss 90° towards hinge side.



- Install (2) 1/4-20 Shoulder Studs on lock stile and position Exit Latch Pad over Studs and insert Cylinder Spindle into Coupling Boss. Place Pad over Studs and tighten 3 Socket Head Set Screws to secure in place.
- Prepare lock jamb for Strike as shown and install using (2) #10 x 13mm Flat Head Self-threading Screws or #10 x 32mm All-purpose Screws.

THE PARKSIDE GROUP LTD

17 WILLOW LANE, MITCHAM, SURREY, CR4 4NX Tel: 020-8685 9685 Fax: 020-8646 5096 Email: axim@parksidegroup.co.uk Web Site: http://www.axim.co.uk

DOGGING EXIT DEVICE USING DOGGING PIN:

Fully depress Cross Bar and hold, push up Dogging Pin with screwdriver and rotate 90° in either direction.

TO RELEASE EXIT DEVICE:

Hold Cross Bar down and rotate Dogging Pin with screwdriver in either direction until Dogging Pin releases.

DOGGING EXIT DEVICE USING <u>CYLINDER KEY:</u> Turn Key toward hinge side approximately 360°.

TO RELEASE EXIT DEVICE:

Turn Key toward latch side approximately 360°.

SCALE	NTS @A4
DATE	MARCH 2014


For scaled technical or CAD drawings, please contact AXIM.



TITLE **RIM-MOUNTED PADDLE HANDLE PR-7095P SERIES EXIT DEVICE**

136.5


SUB TITLE **RIM CYLINDERS FOR AXIM PANIC EXIT DEVICES**

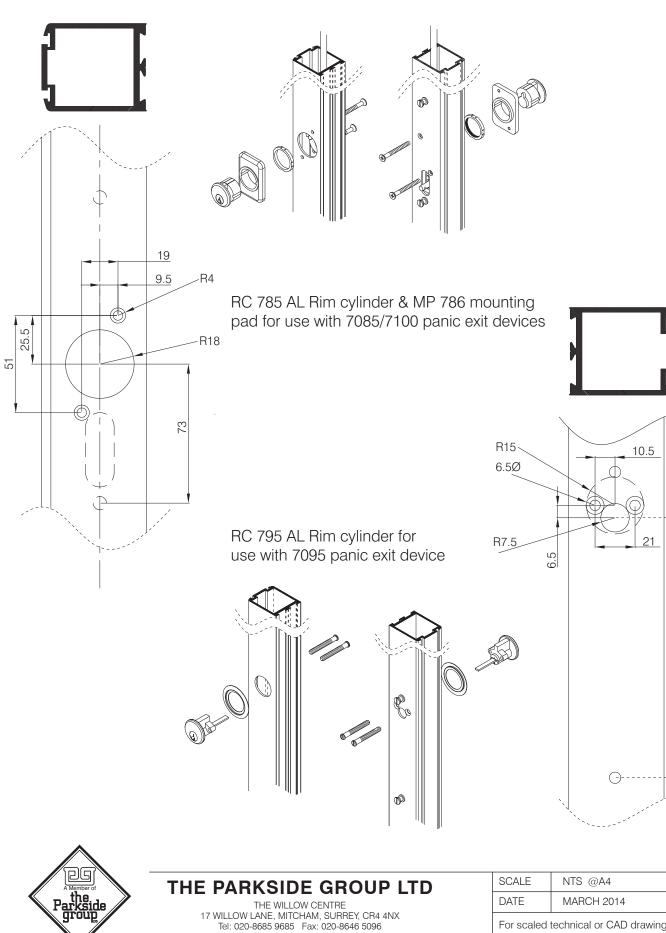

Email: axim@parksidegroup.co.uk

Web Site: http://www.axim.co.uk

For scaled technical or CAD drawings, please contact AXIM.

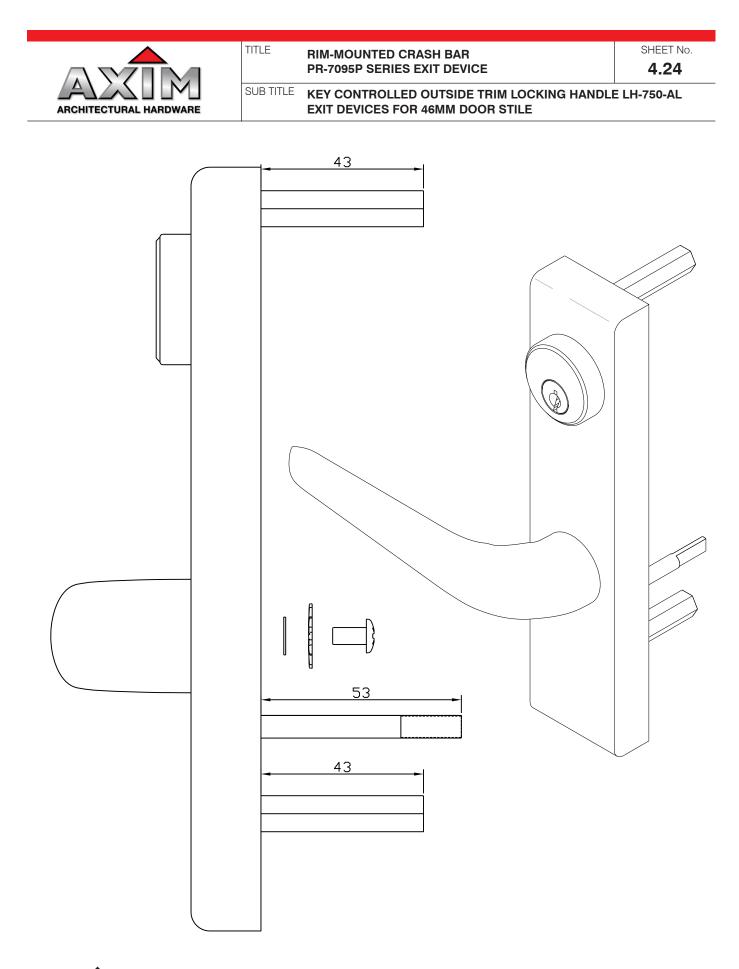




THE PARKSIDE GROUP LTD

THE WILLOW CENTRE 17 WILLOW LANE, MITCHAM, SURREY, CR4 4NX Tel: 020-8685 9685 Fax: 020-8646 5096 Email: axim@parksidegroup.co.uk Web Site: http://www.axim.co.uk SCALENTS @A4DATEAUGUST 2016

For scaled technical or CAD drawings, please contact AXIM.

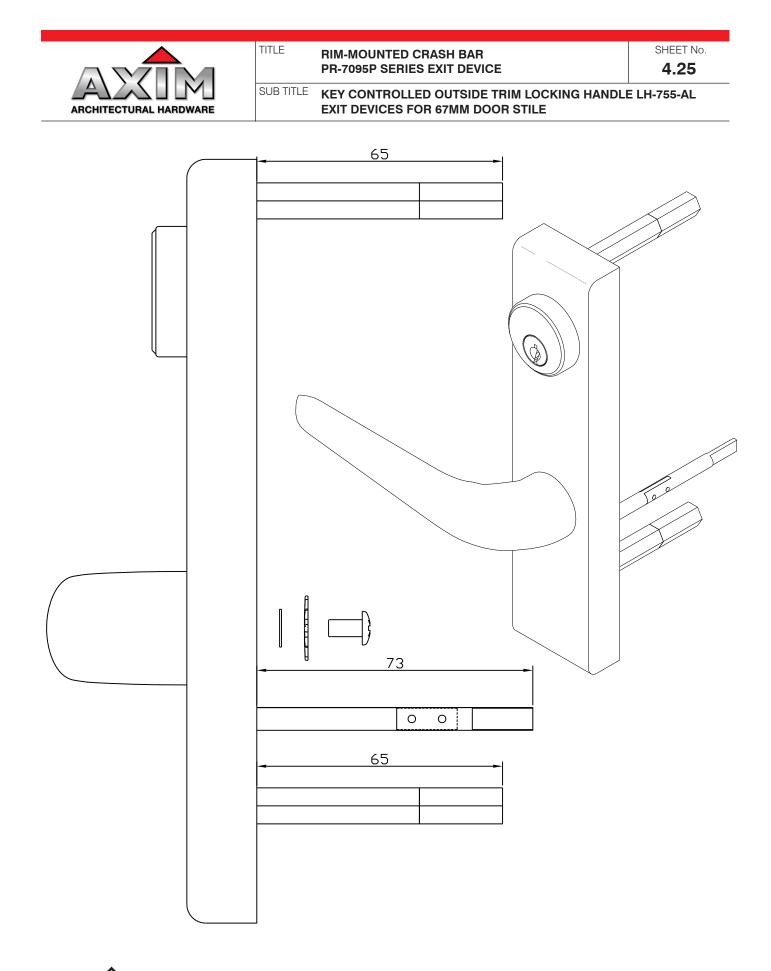



THE PARKSIDE GROUP LTD

THE WILLOW CENTRE 17 WILLOW LANE, MITCHAM, SURREY, CR4 4NX Tel: 020-8685 9685 Fax: 020-8646 5096 Email: axim@parksidegroup.co.uk Web Site: http://www.axim.co.uk
 SCALE
 NTS @A4

 DATE
 AUGUST 2016

For scaled technical or CAD drawings, please contact AXIM.